User's Manual

XPOS82-5B-D525
XPPC82-5B-D525

Copyrights

©2011 All rights reserved. The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

All trademarks are property of their respective owners

Liability Disclaimer

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

Regulatory Information

FCC Notices

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Increase the separation between the equipment and the receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio or television technician for help.

This device complies with Part 15 (A) of the FCC Rules. Operation is subject to the following two conditions:

1) this device may not cause harmful interference and

2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS DEVICE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE DEVICE.

CE Notice

This device complies with **EMC Directive 2004/108/EC** issued by the Commission of the European Community.

WEEE Notice

The **WEEE** mark applies only to countries within the European Union (EU) and Norway.
This appliance is labeled in accordance with **European Directive 2002/96/EC** concerning **waste electrical and electronic equipment** (**WEEE**). The Directive determines the framework for the return and recycling of used appliances as applicable throughout the European Union. This label is applied to various products to indicate that the product is not to be thrown away, but rather reclaimed upon end of life per this Directive.

RoHS Notice

RoHS

This device is full compliance with EU Directive 2002/95/EC (the RoHS Directive) that restricts the use of the hazardous substances listed below in electrical and electronic equipment.

Safety Statement for Lithium Battery

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS

Contents

Copyrights i
Liability Disclaimer i
Regulatory Information i
FCC Notices i
CE Notice i
WEEE Notice ii
RoHS Notice ii
Safety Statement for Lithium Battery ii
Contents iii
1. Hardware Setup 5
1.1. Packing Contents 5
1.2. Quick Tour 6
Front View and Side View 6
Back Panel I/O 7
1.3. Basic Peripherals Installation 7
Power Adapter 8
USB Mouse, USB Keyboard and USB ODD 10
LAN Cable 10
Cash Drawer 10
Printer 11
WiFi Module 11
Customer Display 14
MSR 16
1.4. Adjust Angle 18
1.5. VESA Wall-mount Kit Installation 18
1.6. Turn on the device 19
2. Basic Driver Installation 20
2.1. Before the installation 20
2.2. Chipset Software Installation 20
2.3. VGA Driver Installation 22
2.4. Touch Screen Driver and Software Utility installation 23
2.5. LAN Driver Installation 27
2.6. Audio Driver Installation 28
3. Touchscreen Control Panel Quick Guide 30
3.1. Launch TouchKit Utility 30
3.2. General 31
3.3. Settings 32
3.4. Tools 35

3.5. Display 37
3.6. Edge Compensation 39
4. I/O Definition 42
5.1. Power Connector 42
5.2. Serial Port 42
5.3. Cash Drawer 42
5 Specification 44

1.

Hardware Setup

1.1. Packing Contents

1. Device X 1

2. Power Adapter X 1

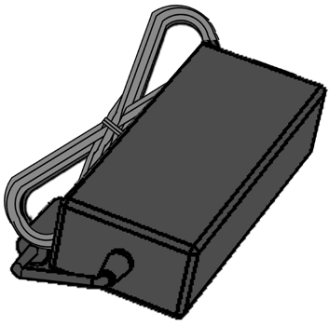

3. Power Cord X 1

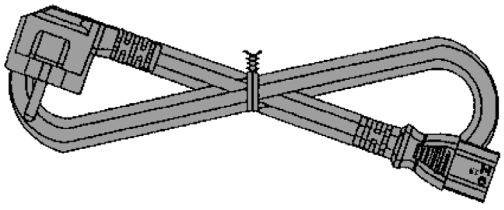

4. RJ50 to DB9 COM port adapter cable X 1

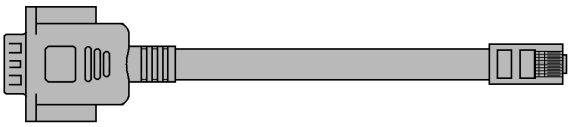

5. Cable Cover X 1

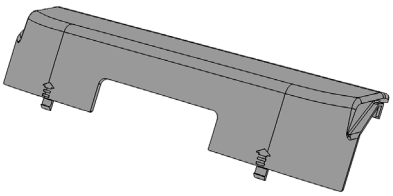

6. Drive and Utility DVD X 1

7. Wall mount kit (X-PPC 852 only)

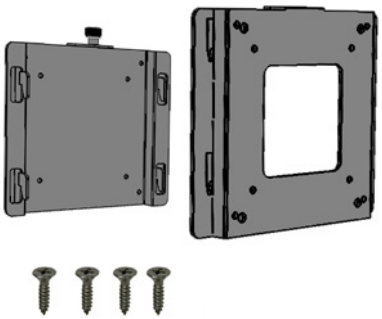

1.2. Quick Tour

Front View and Side View

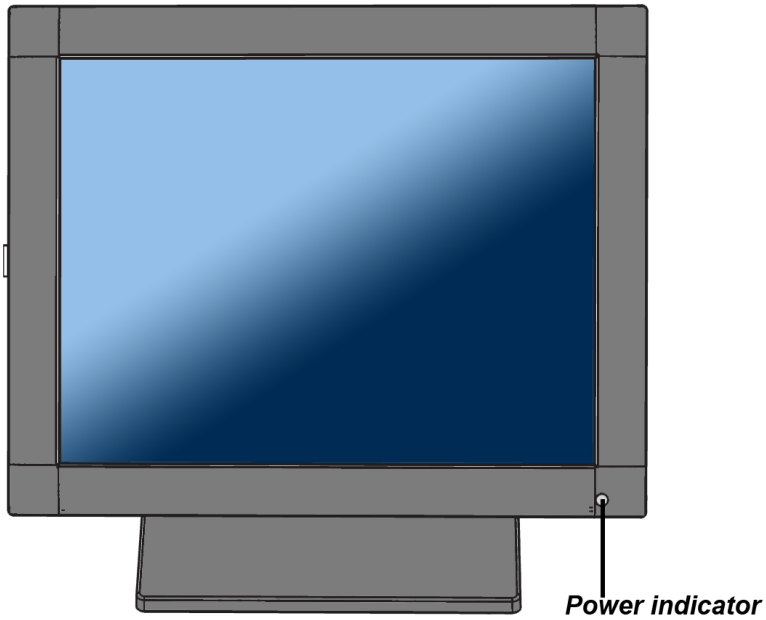

LED Indicator

The **Power** indicator will:	
	1. glow green when power is on.

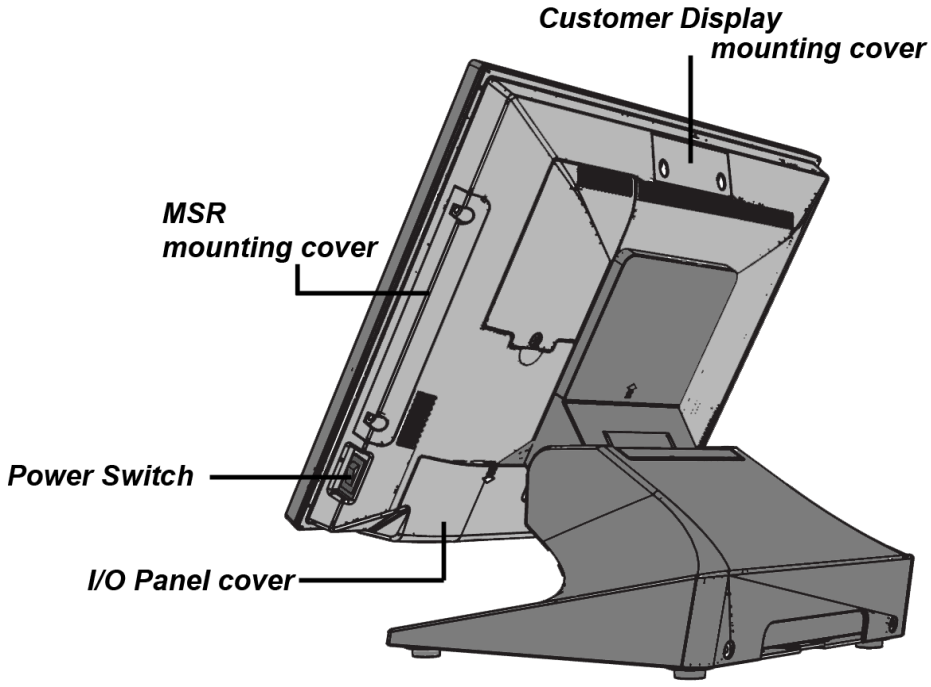

Back Panel I/O

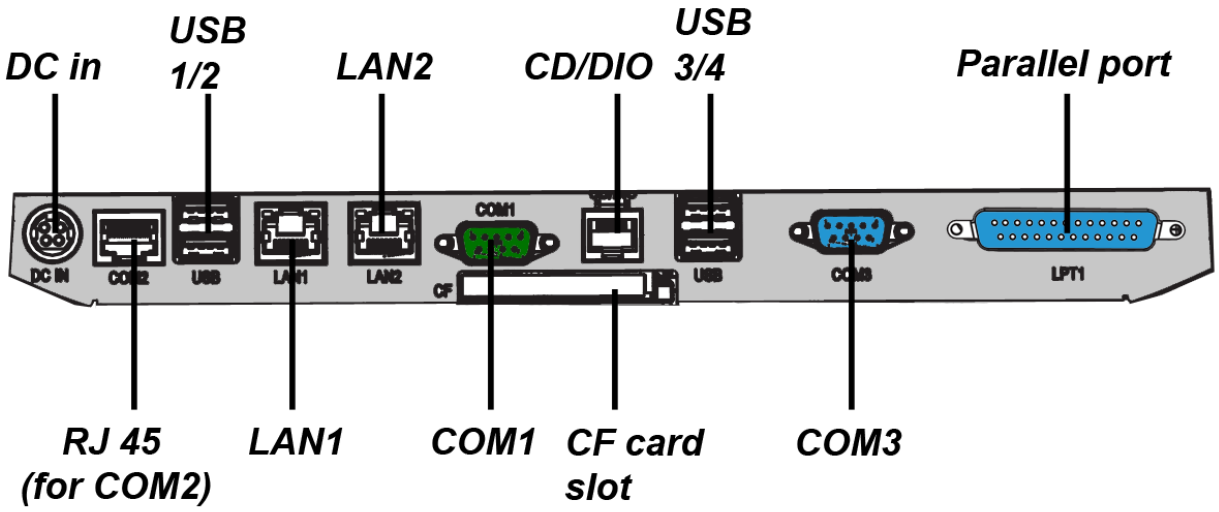

1.3. Basic Peripherals Installation

Remove the cable cover.

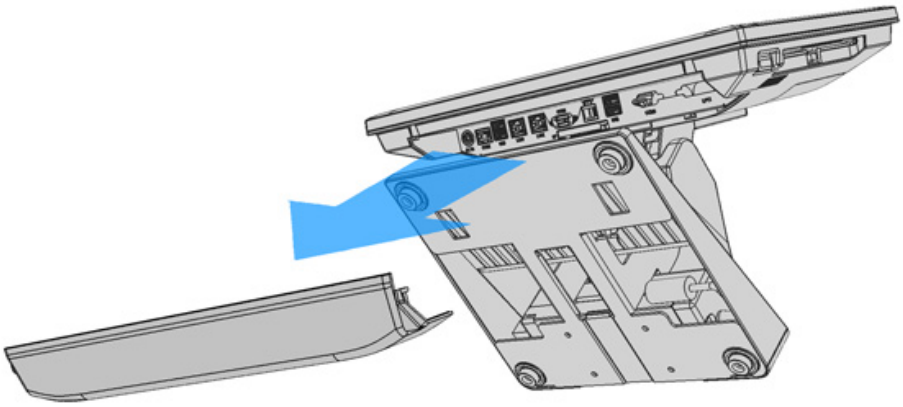

WARNING: Before the cable cover is removed, please make sure the power is off!

All cables and wires from peripherals to the I/O of the POS device are recommended to be connected in the direction as shown below.

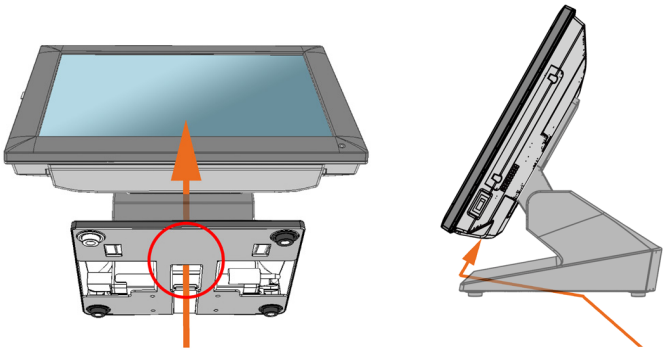

Power Adapter

1. Remove the two screens from the device as shown below.

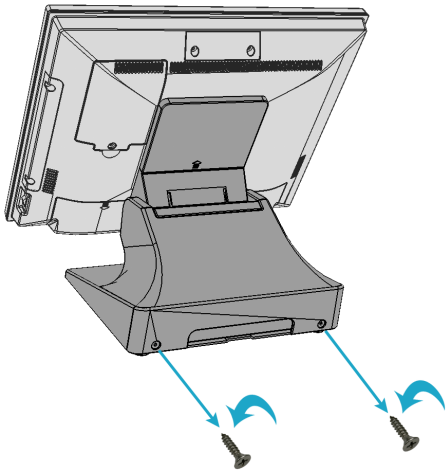

2. Remove the adapter tray.

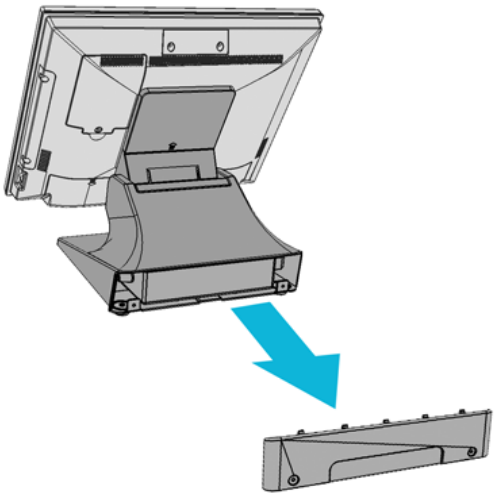

3. Feed the DC cable of the power adapter through the base as shown below.

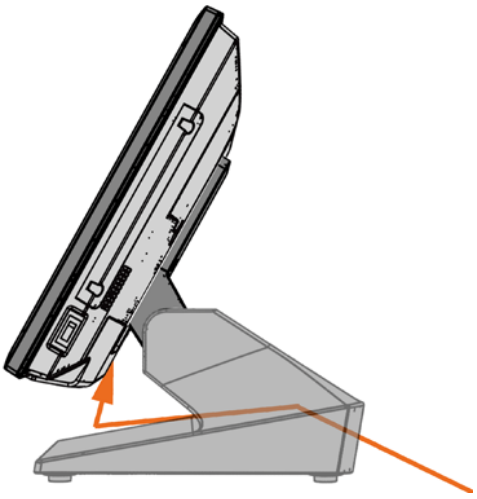

4. Feed the power cable through the base as shown below.

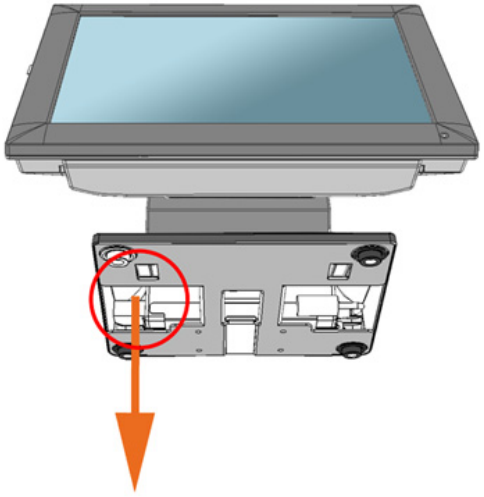

5. Assembly all components as shown below.

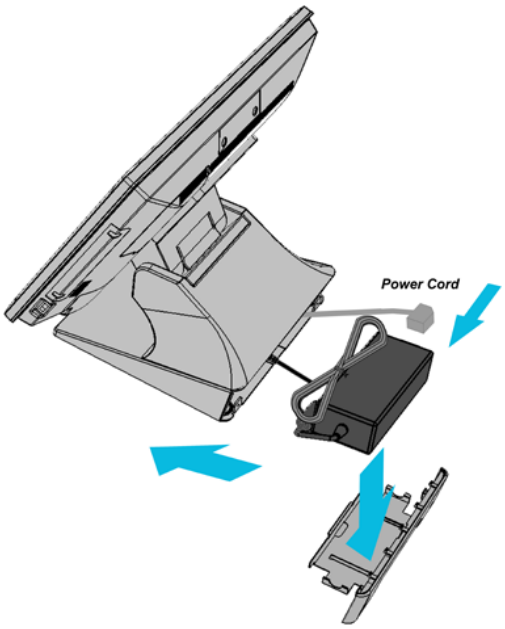

6. Tighten the two screws to fix the adapter tray.

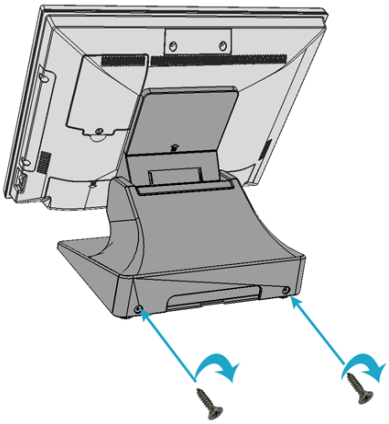

7. Connect the DC cable to the DC in jack.

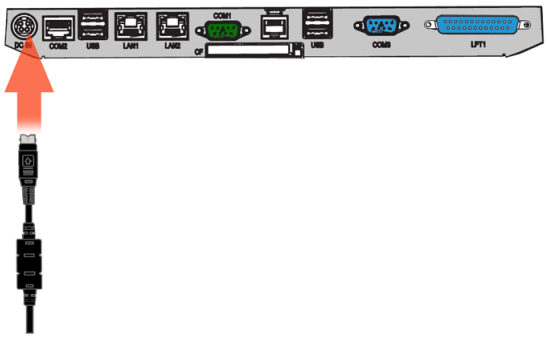

USB Mouse, USB Keyboard and USB ODD

Connect your USB Mouse, USB Keyboard and USB ODD to **USB 1/2** or **UBS 3/4** ports on the back panel of the device.

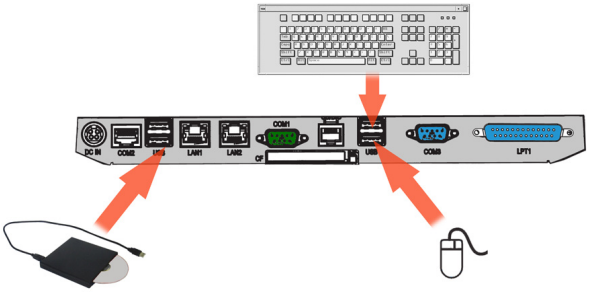

LAN Cable

Connect one end of RJ-45 LAN cable to the **LAN 1** or **LAN 2** port on the back panel of the device, another end to your internet device.

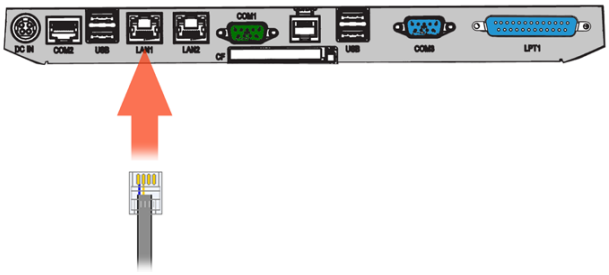

Cash Drawer

Connect one end of RJ-11 cable to the **Cash Drawer** port on the back panel of the device, another end to your cash drawer.

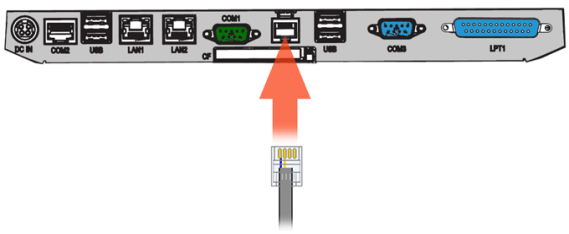

Printer

Connect parallel cable of the printer to the LPT1 (parallel port) on the back panel of the device.

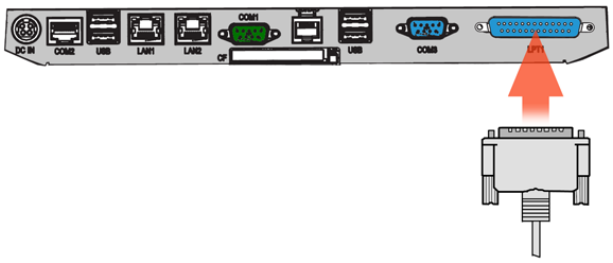

Install the IO panel cover onto the device.

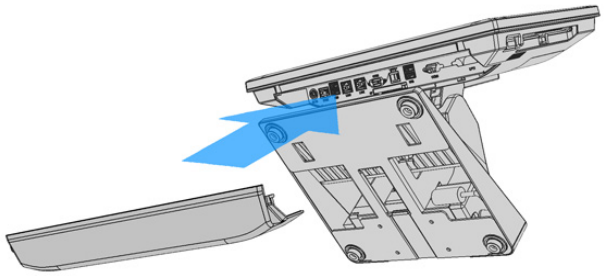

WiFi Module

1. Remove the IO panel cover (if installed) form the device, remove the two screws, and then open the device.

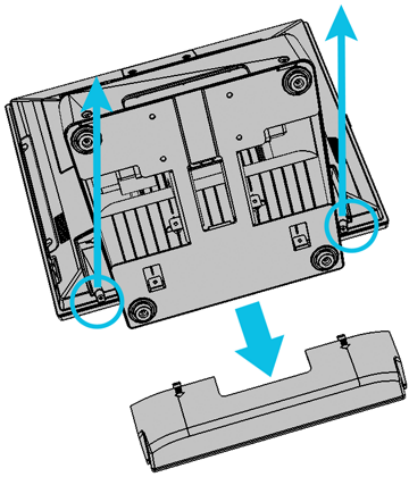

2. Un-tighten two screws.

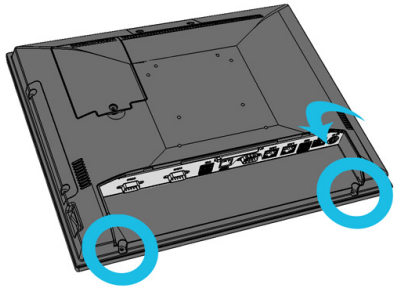

3. Open the back panel.

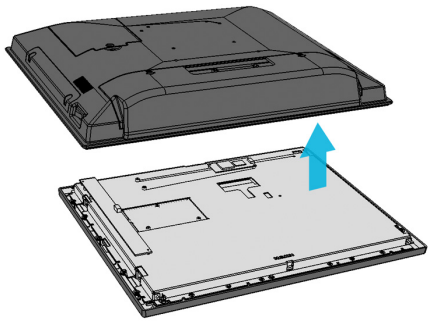

4. Remove all 14 screws as shown.

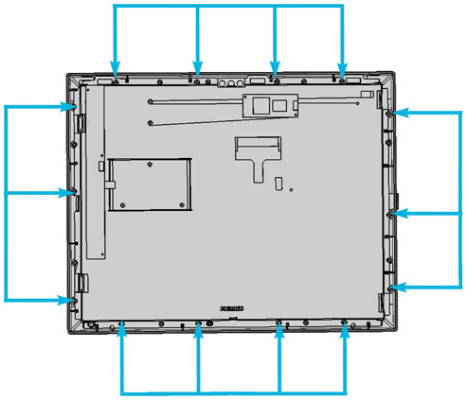

5. Remove the LCD and touch assembly.

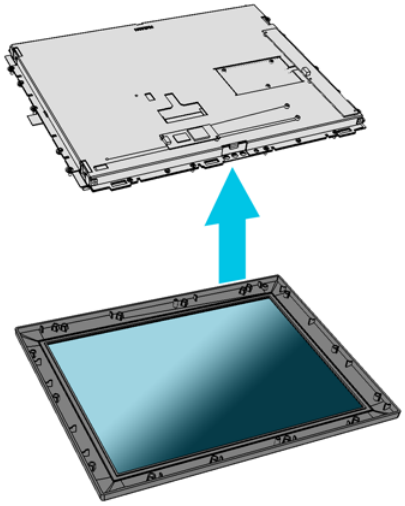

6. Assemble the WiFi module, antenna and WiFi module cable as shown.

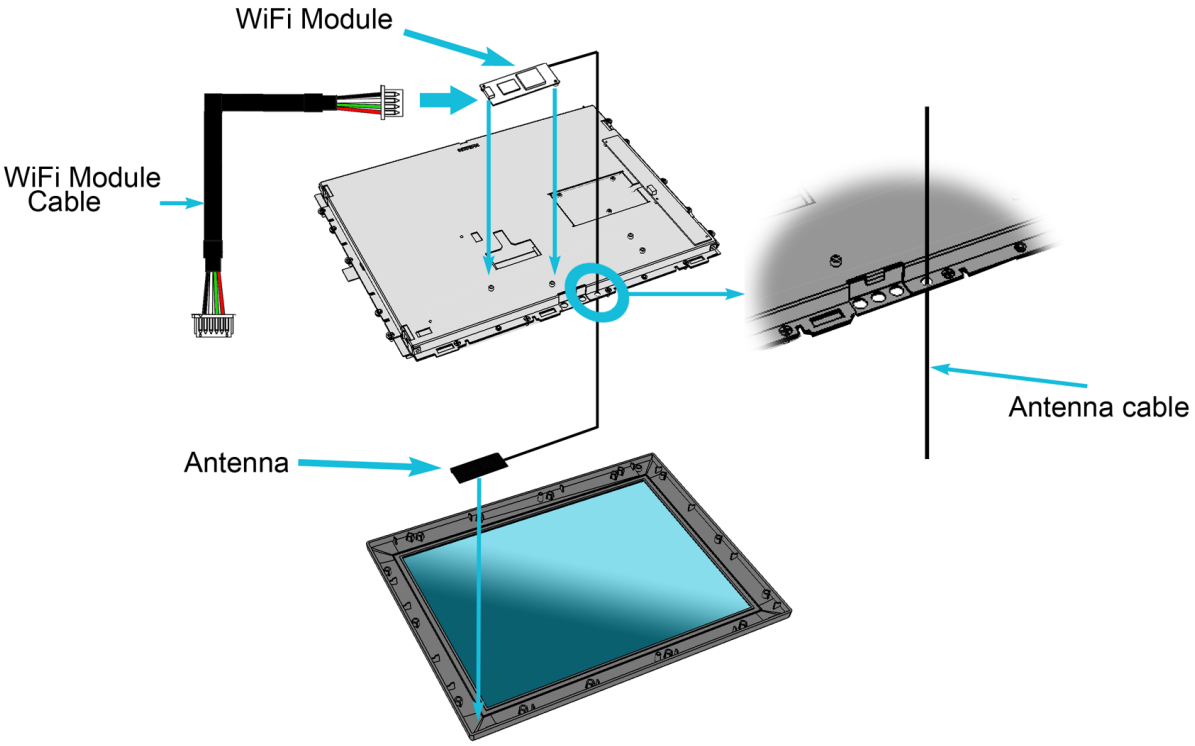

8. Connect the another end of the WiFi module cable to the 4 pin USB header (USB 8) on the main board. For the location of the USB8 on the main board, please refer to the figure below.

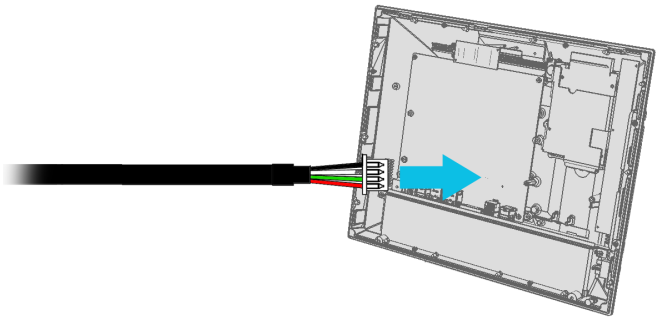

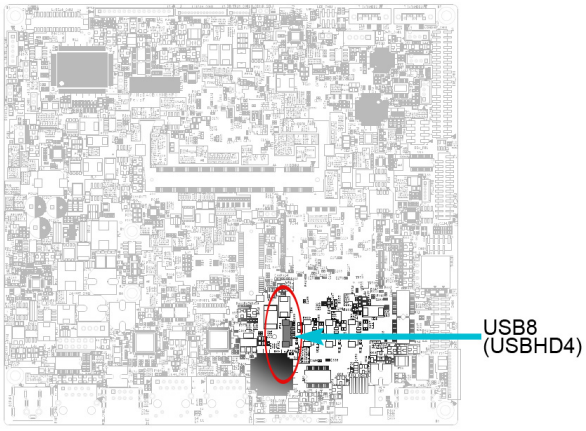

9. Reassembly the device.

A. Hardware Installation

1. Remove the two screws fixing the customer display cover.

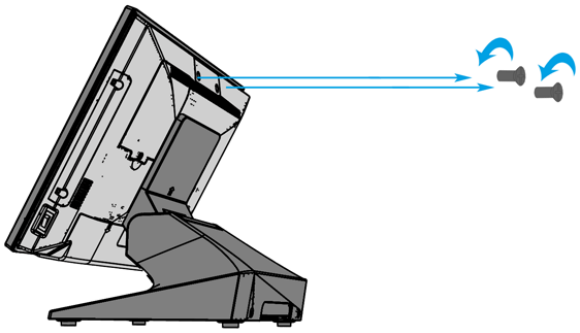

2. Remover the VFD mounting hole cove from the device and pull out the connector from the device.

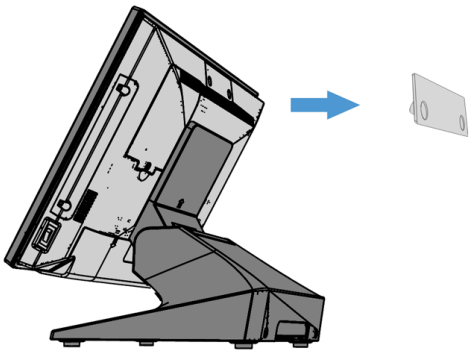

3. Adjust the hinge of the VFD, and then connect to the device as shown below.

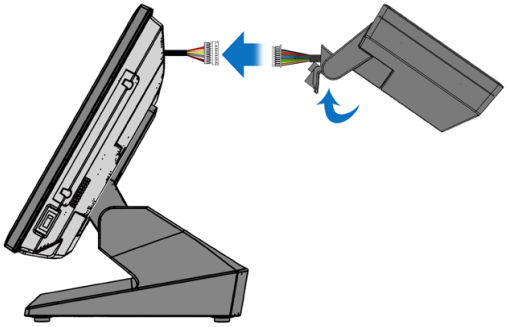

4. Mount the VFD to the device and tighten the two M3 screws as shown below.

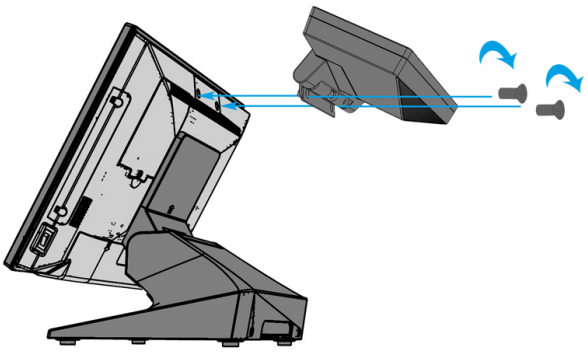

5. Finished.

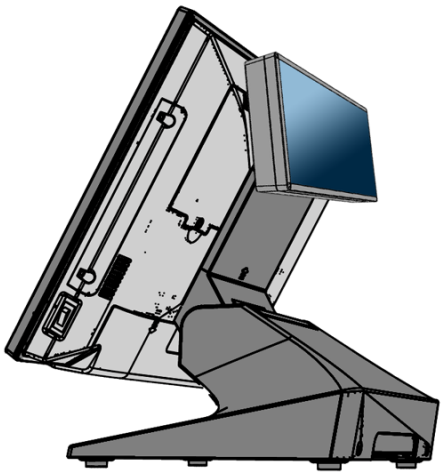

B. Power Supply Configuration

Power up the XPOS852 and hit the DEL key to enter the BIOS. When the BIOS screen appears use the TAB key to select Advanced. Use the arrow keys to select Super IO Configuration then type ENTER. The screen below will appear. Use the arrow keys to select **Serial Port 6** RI/12V depending on what port the customer display is connected to. Select 12V to enable power to the correct COM port. Type F10 to save the settings and exit the BIOS setup.

Caution: Never enable the 12 V without the customer display attached and be sure to disable the 12 V before removing the customer display.

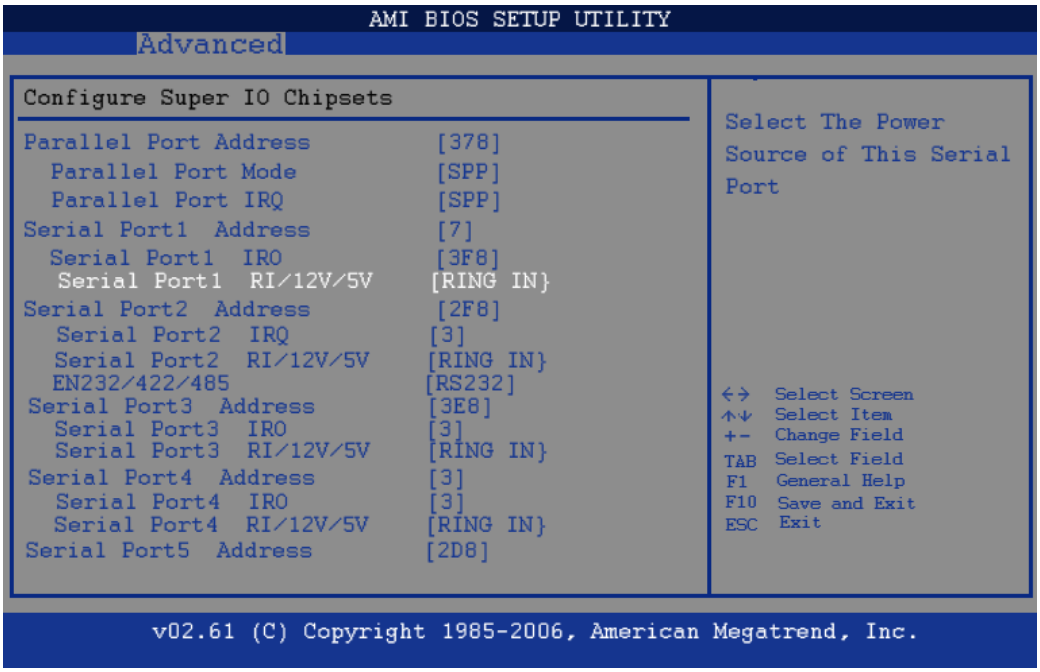

NOTE: The figure above is for reference only; it is possible that the actual screen on your device does not agree with it.

MSR

1. Remove the two screws fixing the MSR cover.

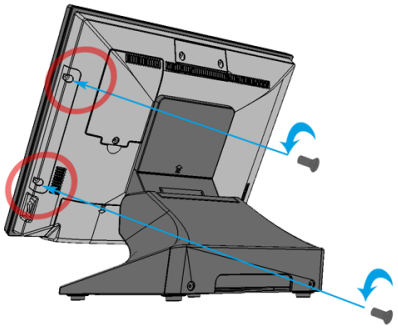

Remove the MSR cover from the device.

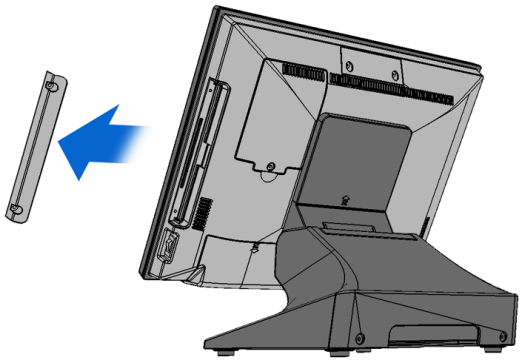

2. For MSR with fingerprint sensor or MSR with RFID sensor, connect the two connectors of the MSR assembly to the device.

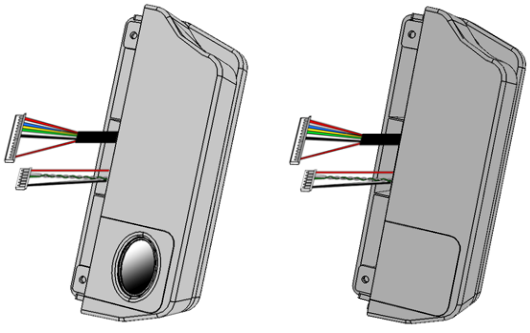

MSR with fingerprint sensor **MSR with RFID sensor**

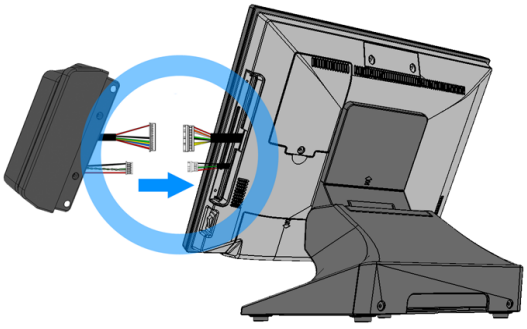

2. For MSR or MSR with iButton, connect the connector of the MSR assembly to the device.

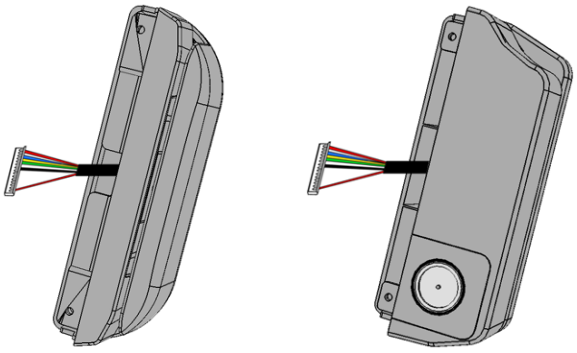

MSR **MSR with iButton**

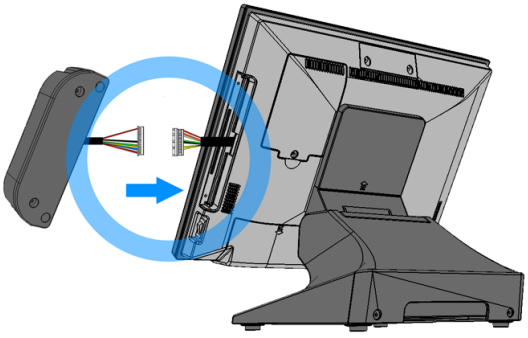

3. Tighten the two M3 screws to fix the MSR assembly as shown below.

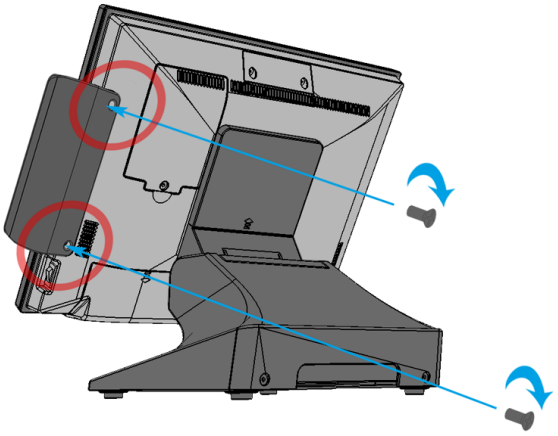

4. Finished.

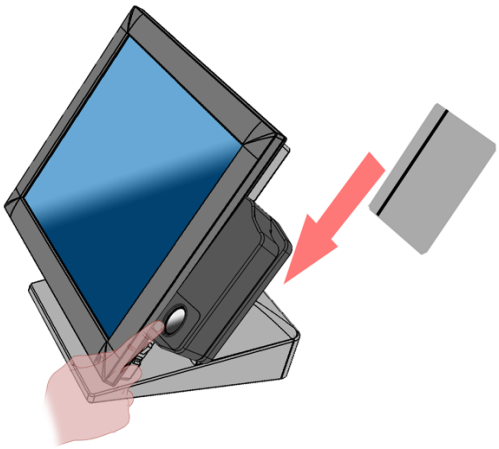

MSR with fingerprint sensor

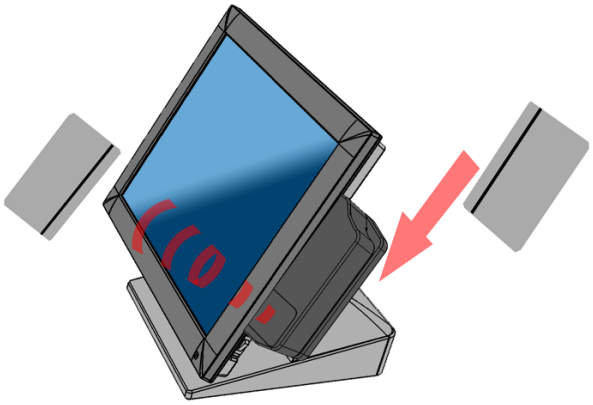

MSR with RFID sensor

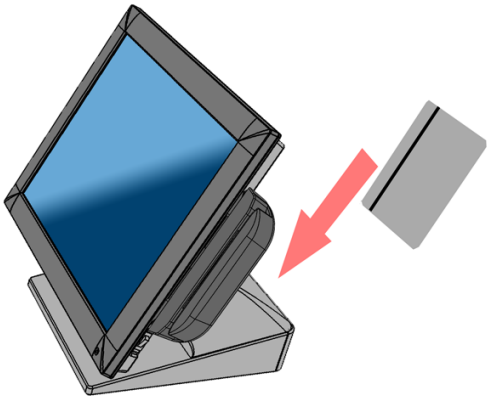

MSR

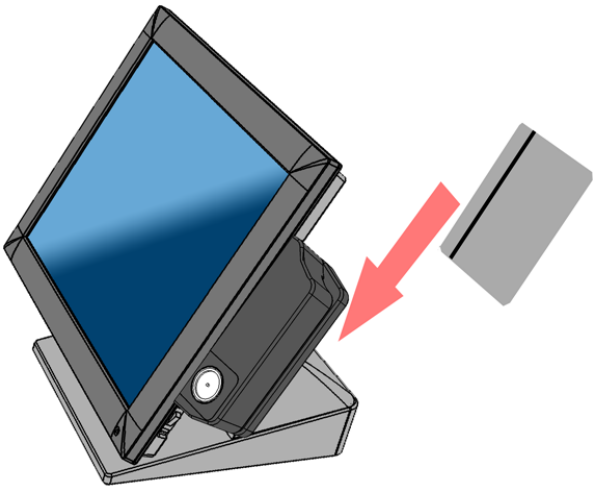

MSR withiButton

1.4. Adjust Angle

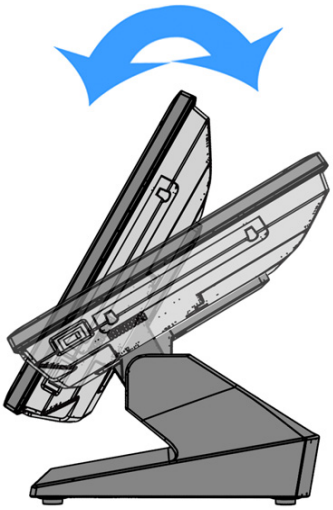

1.5. VESA Wall-mount Kit Installation

1. Install the device bracket.

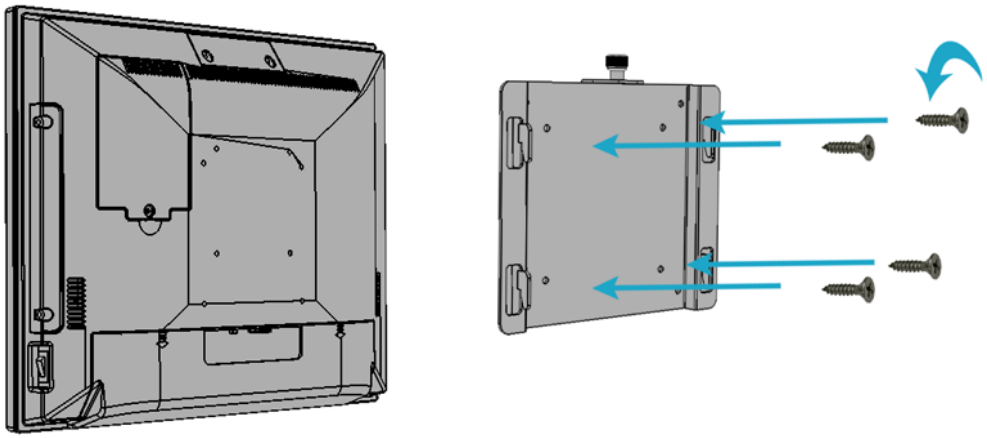

2. Put the XPPC 852 onto the wall bracket which is preinstalled on the wall..
3. Tighten the screw.

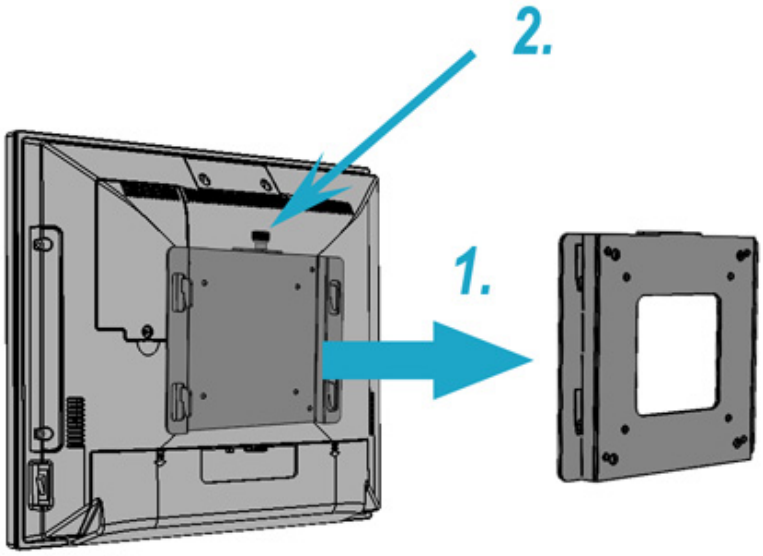

1.6. Turn on the device

1. Make sure all peripherals are connected properly.
2. Press and hold the power switch until the power indicator on the front panel glows green.

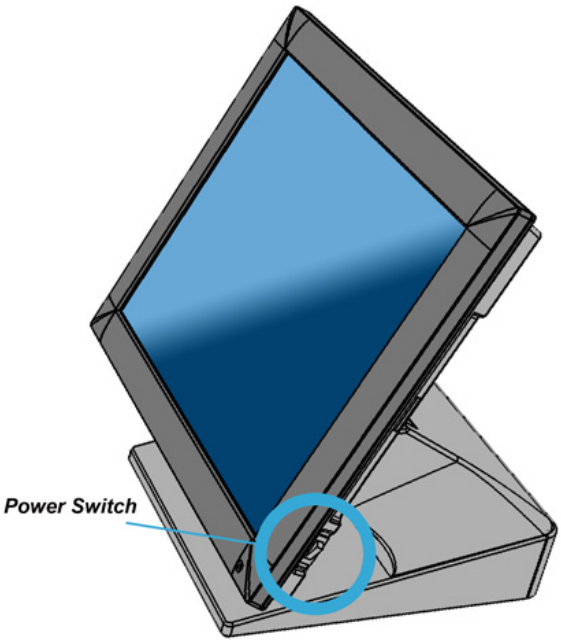

2.

Basic Driver Installation

2.1. Before the installation

1. Connect an external USB CDROM to the USB power and insert the driver CD and turn on the device. The program autoruns and displays the **DRIVER BANK** screen.
2. Follow the on-screen instructions.

2.2. Chipset Software Installation

1. On the main screen, click "**XPOS 852/XPPC852 Series**".

2. Click **INTEL Chipset Driver**.

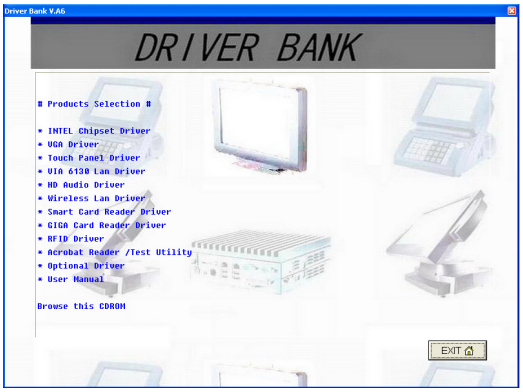

3. Click **Next**.

Intel® Chipset Device Software
Intel® Chipset Device Software
intel
Welcome to the Setup Program
This setup program will install the Intel® Chipset Device Software onto this computer. It is strongly recommended that you exit all Windows* programs before continuing.
< Back
Next >
Cancel
Intel® Installation Framework

4. Read the License Agreement carefully and click **Yes**.

Intel® Chipset Device Software
Intel® Chipset Device Software
License Agreement
intel
You must accept all of the terms of the license agreement in order to continue the setup program. Do you accept the terms?
INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / ISV Distribution & Single User)
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.
Do not use or load this software and any associated materials (collectively, the "Software") until you have carefully read the following terms and conditions. By loading or using the Software, you agree to the terms of this Agreement. If you do not wish to so agree, do not install or use the Software.
Please Also Note:
* If you are an Original Equipment Manufacturer (OEM), Independent Hardware Vendor (IHV), or Independent Software Vendor (ISV), this complete LICENSE AGREEMENT applies;
< Back
Yes
No
Intel® Installation Framework

4. Click **Next**.

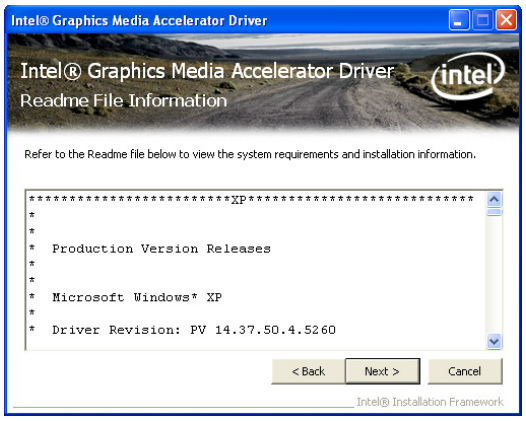

6. Click **Finish**.

Intel® Chipset Device Software
Intel® Chipset Device Software
Setup Is Complete
intel
The setup program successfully installed the Intel® Chipset Device Software onto this computer. Click Finish to complete the setup process.
Finish
Intel® Installation Framework

2.3. VGA Driver Installation

1. On the main screen, click “**XPOS 852/XPPC852 Series**”.

2. Click **VGA Driver**.

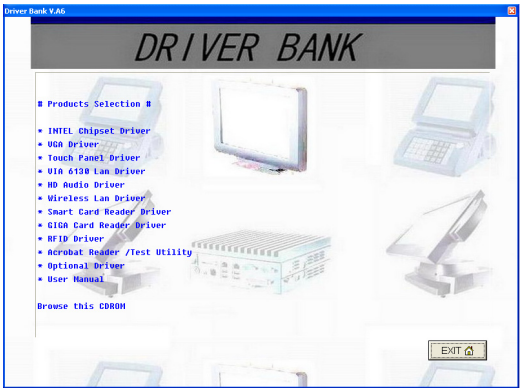

3. Click **VGA Driver for WIN2K/XP**.

4. Click **Next**.

5. Read the License Agreement carefully and click **Yes**.

Intel® Chipset Device Software
Intel® Chipset Device Software
License Agreement
intel
You must accept all of the terms of the license agreement in order to continue the setup program. Do you accept the terms?
INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / ISV Distribution & Single User)
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.
Do not use or load this software and any associated materials (collectively, the "Software") until you have carefully read the following terms and conditions. By loading or using the Software, you agree to the terms of this Agreement. If you do not wish to so agree, do not install or use the Software.
Please Also Note:
* If you are an Original Equipment Manufacturer (OEM), Independent Hardware Vendor (IHV), or Independent Software Vendor (ISV), this complete LICENSE AGREEMENT applies;
< Back
Yes
No
Intel® Installation Framework

6. Click **Next**.

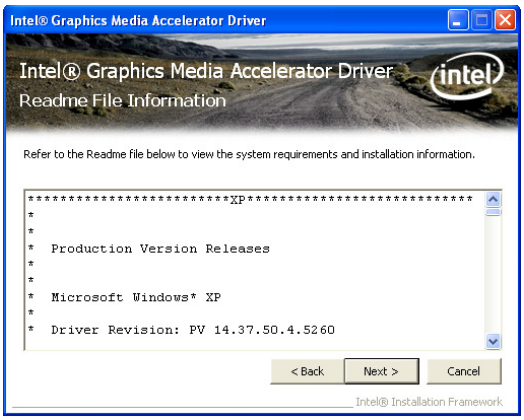
Intel® Graphics Media Accelerator Driver
Intel® Graphics Media Accelerator Driver
Readme File Information
Refer to the Readme file below to view the system requirements and installation information.
**********XP**********
* Production Version Releases
* Microsoft Windows* XP
* Driver Revision: PV 14.37.50.4.5260
< Back
Next >
Cancel
Intel® Installation Framework

7. Click **Next**.

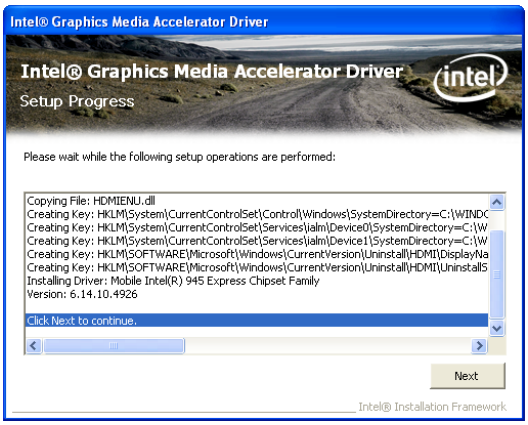

8. Select restart your computer right now or later, and then lick **Finish**.

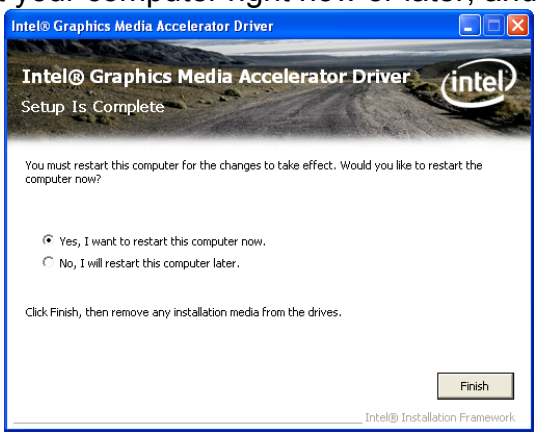
Intel® Graphics Media Accelerator Driver
Intel® Graphics Media Accelerator Driver
Setup Is Complete
You must restart this computer for the changes to take effect. Would you like to restart the computer now?
Yes, I want to restart this computer now.
No, I will restart this computer later.
Click Finish, then remove any installation media from the drives.
Finish
Intel® Installation Framework

2.4. Touch Screen Driver and Software Utility installation

1. On the main screen, click "**XPOS 852/XPPC852 Series**".

2. Click **Touch Panel Driver**.

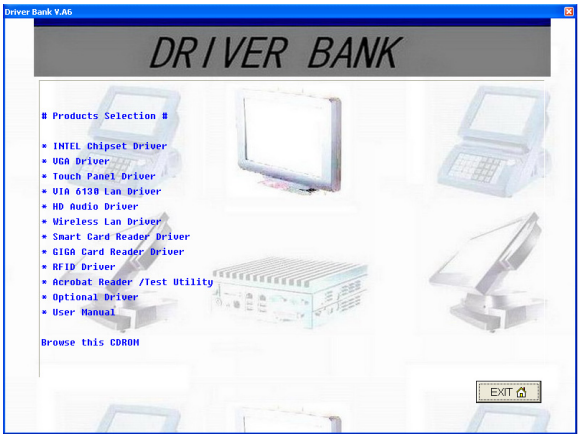

3. The procedure starts.

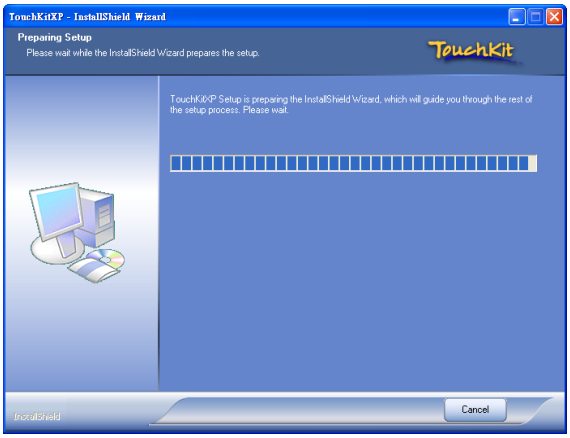
TouchKitXP - InstallShield Wizard
Preparing Setup
Please wait while the InstallShield Wizard prepares the setup.
TouchKit
TouchKitXP Setup is preparing the InstallShield Wizard, which will guide you through the rest of the setup process. Please wait.
InstallShield
Cancel

4. Click **Next**.

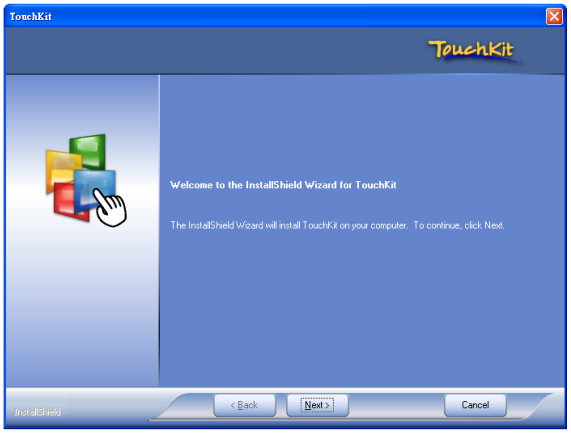
TouchKit
TouchKit
Welcome to the InstallShield Wizard for TouchKit
The InstallShield Wizard will install TouchKit on your computer. To continue, click Next.
InstallShield
< Back
Next >
Cancel

5. Check the Install PS/2 interface driver box and click **Next**.

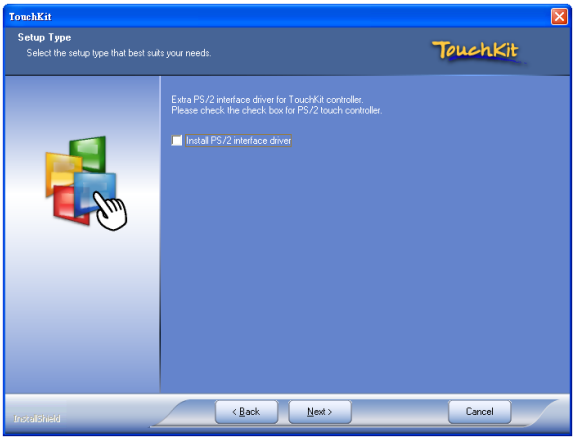

6. Select an item according to your needs, and then click **Next**.

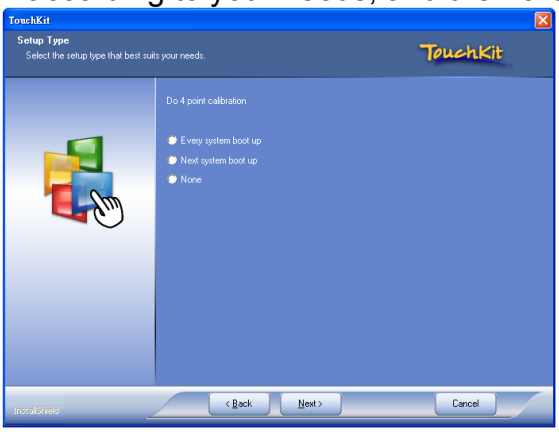

7. Click **OK**.

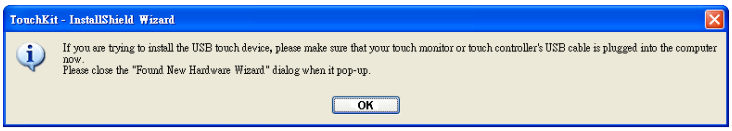
TouchKit - InstallShield Wizard
If you are trying to install the USB touch device, please make sure that your touch monitor or touch controller's USB cable is plugged into the computer now.
Please close the "Found New Hardware Wizard" dialog when it pop-up.
OK

8. If you want to use Multi-Monitor, check the box and click **Next**.

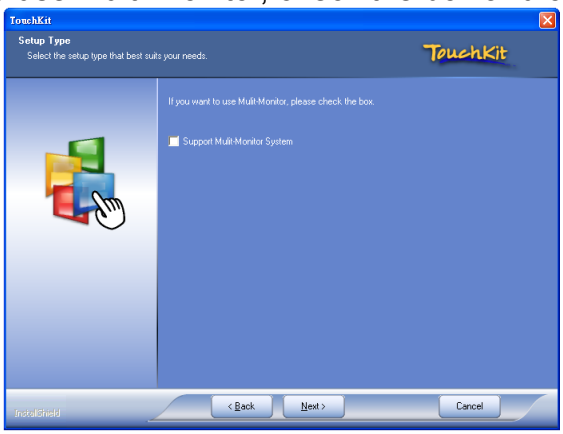

9. Click **Next**.

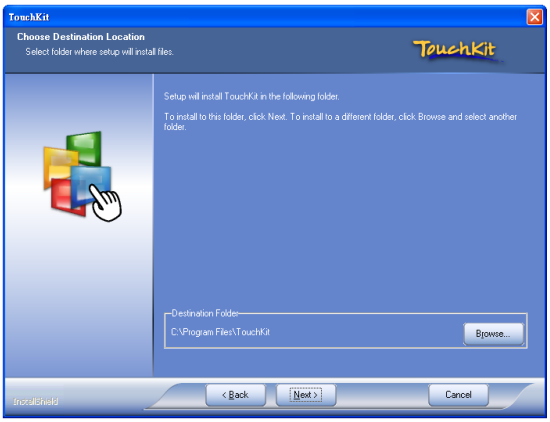
TouchKit
Choose Destination Location
Select folder where setup will install files.
TouchKit
Setup will install TouchKit in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C:\Program Files\TouchKit
Browse...
InstallShield
< Back
Next >
Cancel

10. Click **Next**.

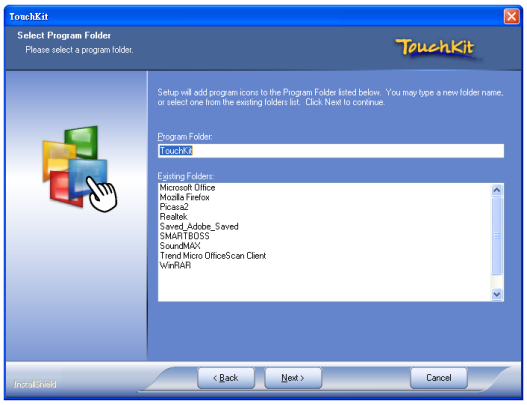

11. The driver starts to install.

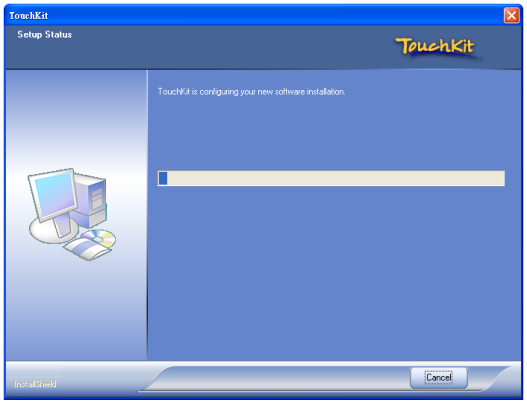

12. Click **OK**.

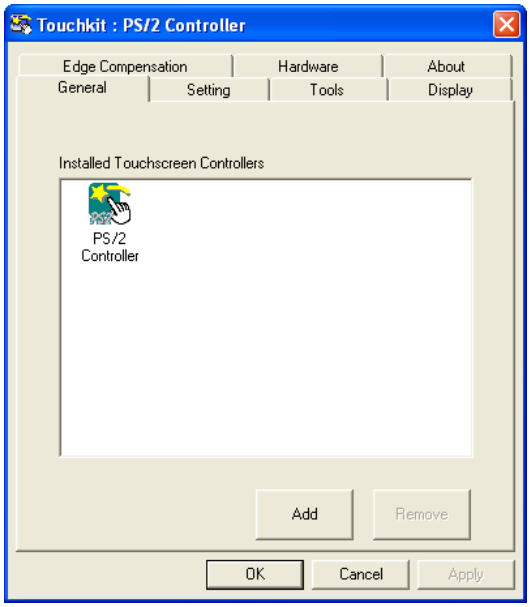

2.5. LAN Driver Installation

1. On the main screen, click “**XPOS 852/XPPC852 Series**”.

2. Click **VIA 6130 LAN Drive**.

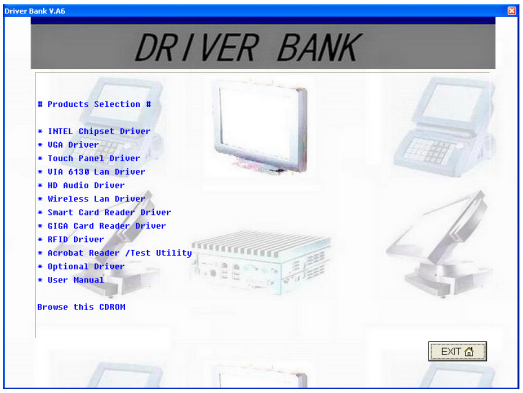

3. The driver will be installed automatically.

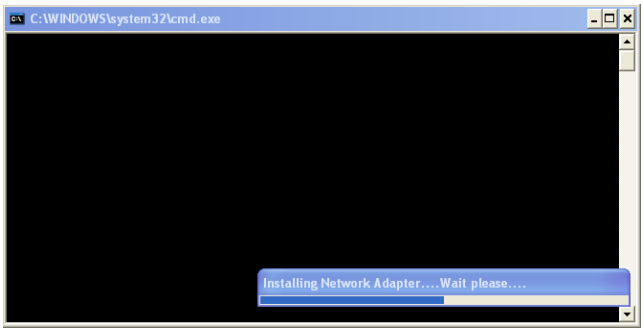

4. Click **OK** on the pop-up message box.

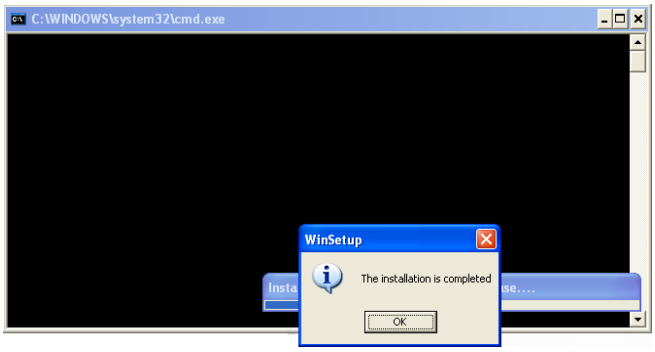

2.6. Audio Driver Installation

1. The driver is preparing to install.

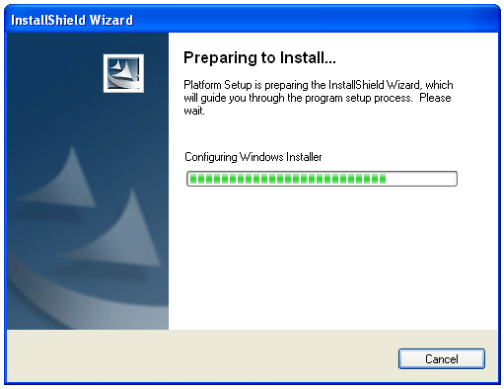
InstallShield Wizard
Preparing to Install...
Platform Setup is preparing the InstallShield Wizard, which will guide you through the program setup process. Please wait.
Configuring Windows Installer
Cancel

2. Click **Nex**t.

VIA HD Audio UAA Driver Setup Wizard v7.3.00.30.090715
Welcome to the Install Wizard for VIA HD Audio UAA Driver Setup Program
The Install Wizard will install VIA HD Audio UAA Driver Setup Program on your computer. To continue, click Next.
< Back
Next >
Cancel

3. Select "**I Agree**" and click **Next**.

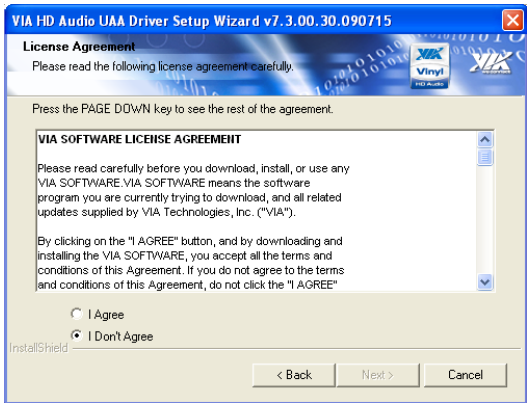
VIA HD Audio UAA Driver Setup Wizard v7.3.00.30.090715
License Agreement
Please read the following license agreement carefully.
Press the PAGE DOWN key to see the rest of the agreement.
VIA SOFTWARE LICENSE AGREEMENT
Please read carefully before you download, install, or use any VIA SOFTWARE.VIA SOFTWARE means the software program you are currently trying to download, and all related updates supplied by VIA Technologies, Inc. ("VIA").
By clicking on the "I AGREE" button, and by downloading and installing the VIA SOFTWARE, you accept all the terms and conditions of this Agreement. If you do not agree to the terms and conditions of this Agreement, do not click the "I AGREE"
I Agree
I Don't Agree
InstallShield
< Back
Next >
Cancel

4. Check "**VIA HD Audio Codec Drive v7.300 30.090715**" box, and then click **Next**.

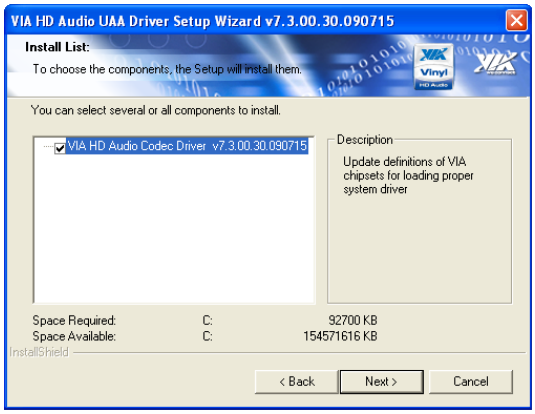
VIA HD Audio UAA Driver Setup Wizard v7.3.00.30.090715
Install List:
To choose the components, the Setup will install them.
You can select several or all components to install.
VIA HD Audio Codec Driver v7.3.00.30.090715
Description
Update definitions of VIA chipsets for loading proper system driver
Space Required: C: 92700 KB
Space Available: C: 154571616 KB
InstallShield
< Back
Next >
Cancel

5. Click **Next**.

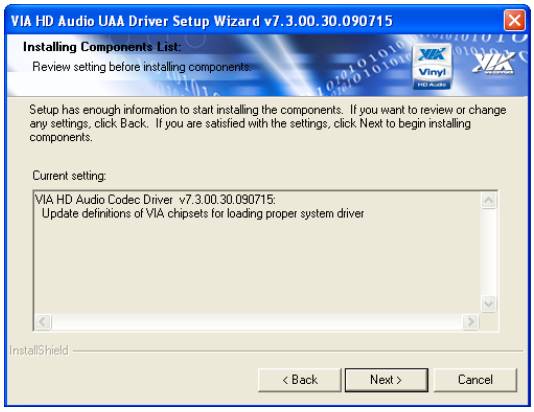
VIA HD Audio UAA Driver Setup Wizard v7.3.00.30.090715
Installing Components List:
Review setting before installing components.
Setup has enough information to start installing the components. If you want to review or change any settings, click Back. If you are satisfied with the settings, click Next to begin installing components.
Current setting:
VIA HD Audio Codec Driver v7.3.00.30.090715:
Update definitions of VIA chipsets for loading proper system driver
InstallShield
< Back
Next >
Cancel

6. Click **Next**.

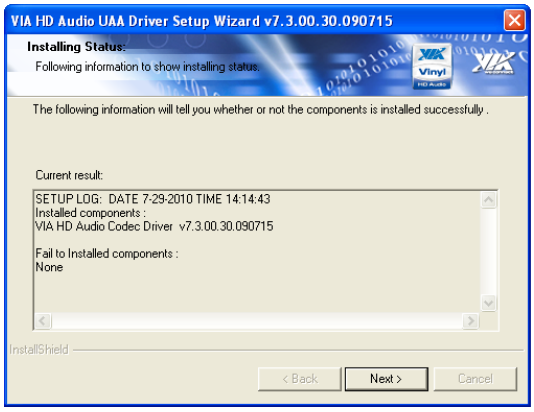
VIA HD Audio UAA Driver Setup Wizard v7.3.00.30.090715
Installing Status:
Following information to show installing status.
The following information will tell you whether or not the components is installed successfully .
Current result:
SETUP LOG: DATE 7-29-2010 TIME 14:14:43
Installed components :
VIA HD Audio Codec Driver v7.3.00.30.090715
Fail to Installed components :
None
InstallShield
< Back
Next >
Cancel

7. Select restart your computer right now or later, and then lick **Finish**.

VIA HD Audio UAA Driver Setup Wizard v7.3.00.30.090715
Install Wizard Completed.
The Install Wizard has successfully installed VIA HD Audio UAA Driver Setup Program. Before you can use the program, you must restart your computer.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
< Back
Finish
Cancel

3.

Touchscreen Control Panel Quick Guide

3.1. Launch TouchKit Utility

There are two alternatives to launch **TouchKit**.

Option 1:

Under Microsoft Windows XP, click “**start**” menu and select “**Programs**”, under ”**TouchKit**” menu, click “**Configure Utility**”.

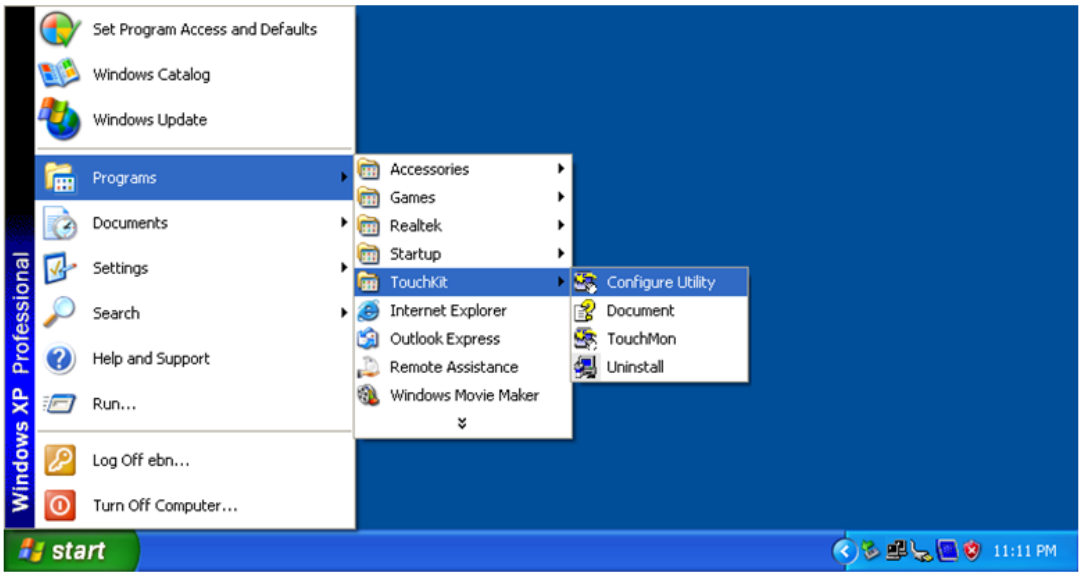

Option 2:

Click icon on the task bar to launch **TouchKit** utility.

3.2. General

The **General** tab in **Touchkit utility** shows all of **TouchKit** touchscreen controllers installed as below, including RS232, USB and PS2 interfaces.

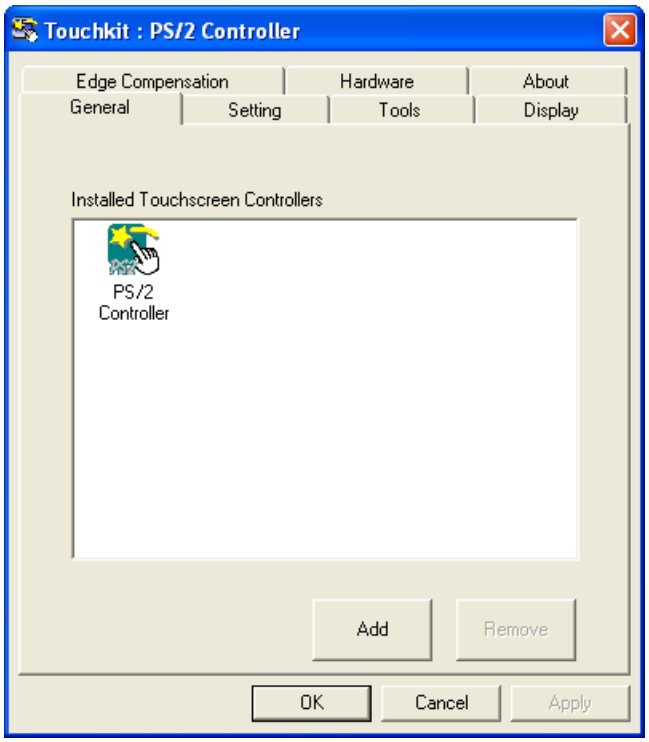

Add

The function button is used for serial RS232 controllers only. Press this button to search the **TouchKit** serial controllers connected with the COM ports of the device. Whenever it finds a new **TouchKit** serial controller, a new serial controller icon object will be shown in the controller list window automatically.

USB **TouchKit** device supports plug and play, the icon object for USB controller will be shown in the controller list window automatically when the USB controller is connected with the USB port of the device. And, the icon object for the USB controller will disappear automatically as soon as the device was removed from the USB port of the device.

TouchKit PS2 driver support PS2 mouse and **TouchKit** touchscreen controller. It can works with both PS2 mouse and **TouchKit** touchscreen PS2 controller. After the **TouchKit** PS2 driver was installed, this utility assumes the PS2 touchscreen controller exists and is always shown in the controller list window.

Remove

This function button is used for serial RS232 controllers only. This button will be grayed and disabled automatically when the selected controller in the controller list window is not RS232 type. Press to remove and uninstall the selected serial RS232 controller from the device. Then, this serial RS232 icon object in controller list window disappears automatically.

USB TouchKit device supports plug and play, the icon object for USB controller will be shown in the controller list window automatically when the USB controller is connected with the USB port of the device. And, the icon object for the USB controller will disappear automatically as soon as the device was removed from the system USB port.

TouchKit utility does not allow you to remove/uninstall the PS2 device driver dynamically. To uninstall the **TouchKit** PS2 driver, you need to go to Windows Device Manager to do un-installation. In addition, after PS2 un-installation, it needs to reboot the device to complete un-installation.

3.3. Settings

There are function buttons and check boxes in the **Settings** tab.

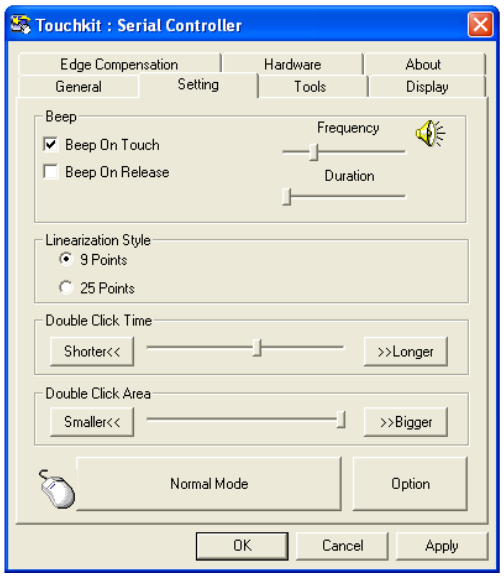

Beep

Beep On Touch

Check this check box to enable driver to generate a beep sound when touch touchscreen state is switched from untouched to touched state.

Beep On Release

Check this check box to enable driver to generate a beep sound when touchecreen state is switched from touched state to untouched state.

Frequency

Drag the slider to adjust this frequency to control the beep sound frequency generated by the driver.

Duration

Drag the slider to adjust this duration to control the beep sound duration.

Linearization Style

TouchKit utility provides you with both 9 points and 25 points calibration for linearization. You can select the suitable linearization type.

Double Click Time

Double Click Time is used to set double click time. Change this value will affects the double click behavior for all of the mouse devices connected to the device. Two continuous clicks at the same area within this specified time period will be recognized as a double click event.

Double Click Area

Double click area is used to set the double click area. Change this value will affects the double click behavior for all of the mouse devices connected to the device. Two continuous clicks with this specified area

in the specified double click time will be recognized as a double click event.

Mouse Emulation Mode

Change the emulation mode by pressing on this button.

Normal Mode

Normal mode behaves mouse button down and mouse move. You can select this mode to select object, and dragging the object.

Click On Touch

With this **Click On Touch** mode, the driver emulates a mouse click event when the touchscreen state was switched from un-touched state to touched state. Then, the driver always generate mouse move event and is tracking the touch position until the touchscreen state switched to un-touch state.

Click On Release

With this **Click On Release** mode, the driver emulates a mouse click event when the touchscreen state was switched from touched state to un-touched state.

Click On Touch without moving cursor

With this mode, the driver behaves similar as **Click On Touch** mode. The cursor does not move to the touch position except the first touch point.

Click On Release without moving cursor

With this mode, the driver behaves similar as **Click On Release** mode. The cursor does not move to the touch position except the lift-off point.

Option

You can set configuration for some advanced functions with this option button. Press this button, a pop up property sheet window will be popped up and shown as below.

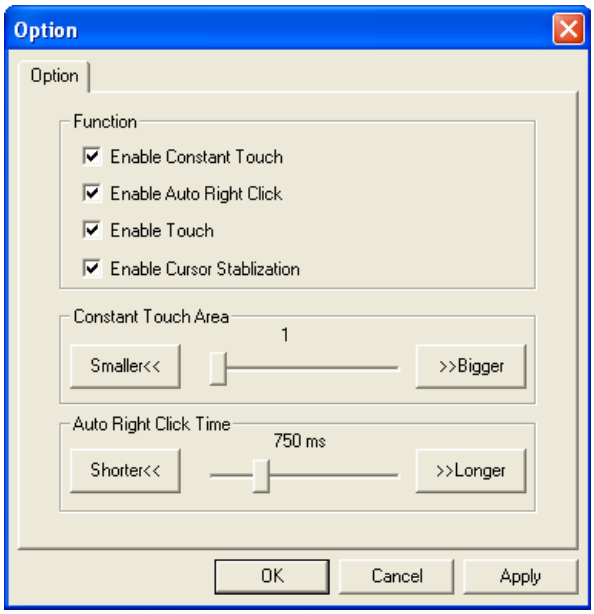

3.4. Tools

There are function buttons and check boxes in the **Tools** tab.

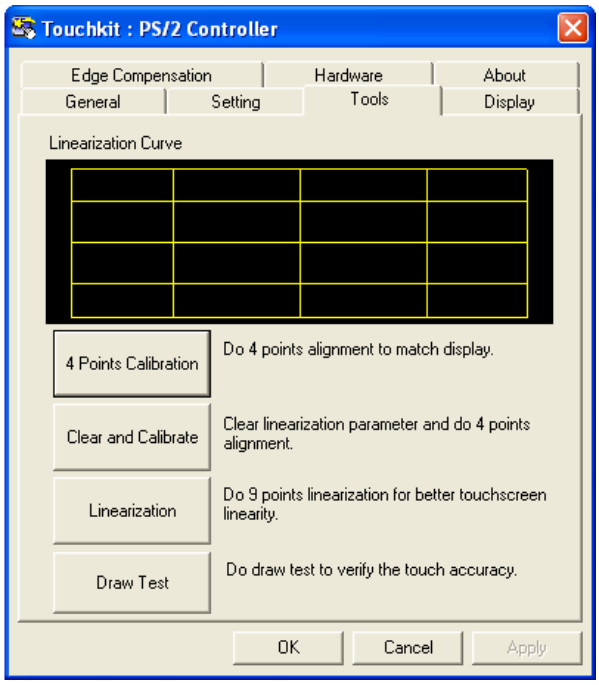

4 Points Calibration, Clear and Calibration, and Linearization button

Click the one of three these buttons and follow the instruction on the screen to do the screen calibration.

Draw Test

After clicking this button, you can do the drawing test by drawing any path on the screen as shown below.

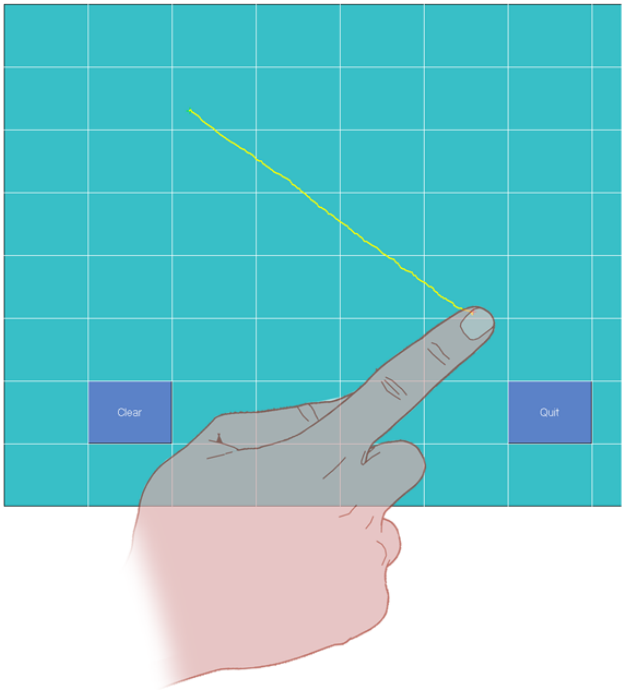

You can remove all paths you drew by clicking **Clear**, or exit this screen by clicking **Quit**.

3.5. Display

TouchKit driver utility supports multiple monitor and display system. To work with multiple monitor system, you need to do proper configuration to map the touchscreen working area to the correct system display area. You can do such configuration with this property page shown as below,

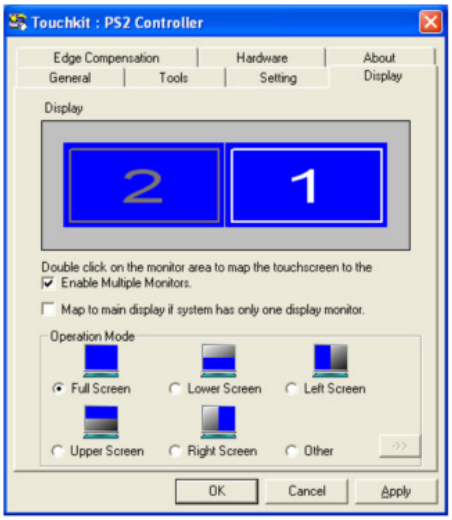

Please follow below instructions to do the configuration:

Enable multiple monitor

Check this check box to enable multiple monitor support and uncheck it to disable multiple monitor support. When this function is disabled, the touchscreen will be mapped to the primary monitor automatically.

When this function is enabled, user can double click on the monitor area in the monitor geometry window to assign the monitor area where the touchscreen will be mapped. In other word, the touchscreen will work with the selected monitor. Then, the selected monitor area rectangle line will be changed to be white and the other monitor rectangles line will be grey.

Map to main monitor when the system has only one monitor

When the multiple monitor function was enabled, and the system has only one monitor.

Driver allows user to generate the mouse event for the primary monitor or not when the touchscreen which were not mapped to primary monitor. Check the check box to enable this function, then, the driver will generate the mouse event for the primary monitor even through the touchscreen was configured as other monitor mapping and multiple monitor function enabled.

Operation Mode

TouchKit driver support split display mode for those applications which do not map the touchscreen to the full screen of the monitor.

Full screen

The touchscreen will be mapped to the full screen of the specified monitor.

Right screen

The touchscreen will be mapped to the right half screen of the specified monitor.

Left screen

The touchscreen will be mapped to the left half screen of the specified monitor.

Upper screen

The touchscreen will be mapped to the upper half screen of the specified monitor.

Lower screen

The touchscreen will be mapped to the lower half screen of the specified monitor.

Other operation mode

Quarter 1

The touchscreen will be mapped to the first quarter area of the specified monitor display.

Quarter 2

The touchscreen will be mapped to the 2nd quarter area of the specified monitor display.

Quarter 3

The touchscreen will be mapped to the 3rd quarter area of the specified monitor display.

Quarter 4

The touchscreen will be mapped to the 4th quarter area of the specified monitor display.

Customized

If the touchscreen needs to be mapped the area other than the above area, user can define the mapping area for application. With this mode, the driver does not correct the mapping area when the display resolution changed. It needs to do configuration setting again whenever the display resolution changed.

3.6. Edge Compensation

Edge Compensation property page contains functions of **Edge Compensation** for Top, Bottom, Left, Right, X Axis and Y Axis.

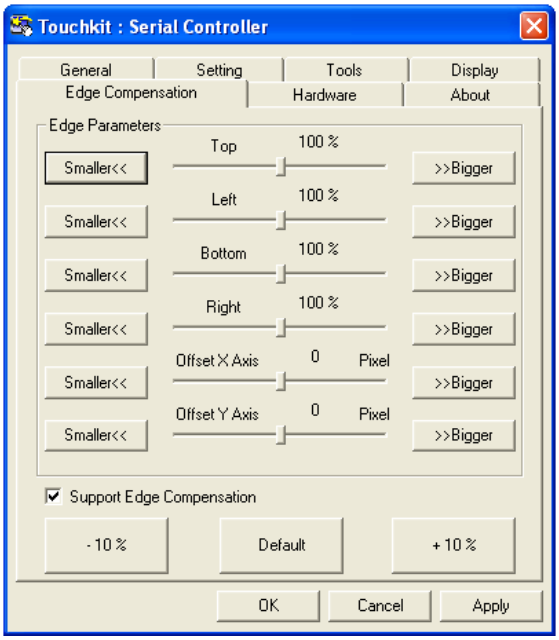

In some cases, if it is difficult to touch items at the edges of the touch panel, you can set adjustment to reach the edges of the screen image.

Top

If you set the Edge to "Smaller", **TouchKit** will reduce the horizontal position of the top edge. If you set the Edge to "Larger", **TouchKit** will extend the horizontal position of the top edge.

Bottom

If you set the Edge to "Smaller", **TouchKit** will reduce the horizontal position of the bottom edge. If you set the Edge to "Larger", **TouchKit** will extend the horizontal position of the bottom edge.

Left

If you set the Edge to "Smaller", **TouchKit** will reduce the vertical position of the right edge. If you set the Edge to "Larger", **TouchKit** will extend the vertical position of the left edge.

Right

If you set the Edge to "Smaller", **TouchKit** will reduce the vertical position of the right edge. If you set the Edge to "Larger", **TouchKit** will extend the vertical position of the right edge.

In some cases, cursor will be behind the finger when you touch the panel. If you can not see the cursor when you touch down the panel, you can set **X Axis** or **Y Axis** to move the cursor.

Offset X Axis

If you set the Offset X Axis to Smaller, cursor will be moved a pixel of X Axis to left.

If you set the Offset X Axis to Larger, cursor will be moved a pixel of X Axis to right.

Offset Y Axis

If you set the Offset Y Axis to Smaller, cursor will be moved a pixel of

Y Axis to top.

If you set the Offset Y Axis to Larger, cursor will be moved a pixel of X Axis to bottom.

Edge Compensation Switch

You can check **Support Edge Compensation** check box to enable/disable this function from left corner.

Edge Compensation Button

Click **+10%** or **-10%** button to adjust the smaller or larger of edge. If you click **+10%** button, the top, bottom, left and right edges will extend 10% of orientation to touch screen, and cursor will be moved 10 pixel of X and Y Axis to right and top.

If you click **-10%** button, the top, bottom , left and right edges will contract 10% of orientation to touch screen, and cursor will be moved 10 pixel of X and Y Axis to left and bottom.

Click **Default** button to resume to the default value.

4.

I/O Definition

Please refer the detailed technical information about all I/O ports as followings.

5.1. Power Connector

PIN	Description	PIN	Description
1	+19V	3	GROUND
2	+19V	4	GROUND

5.2. Serial Port

COM Port 1/2/3			
PIN	Description	PIN	Description
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI / 5V /12V
5	GND	10	NC

5.3. Cash Drawer

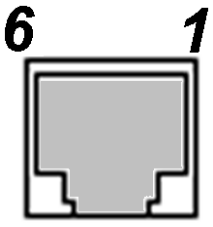

Connector

PIN	Description	PIN	Description
1	GND	4	D_IN
2	NC	5	D_OUT
3	VCC	6	GND

Cash Drawer Control

Status	Address	Value
Open	280H	Bit 4 = 0
Close	280H	Bit 4 = 1
Read Status	281H	Bit 0 = 0/1

5.

Specification

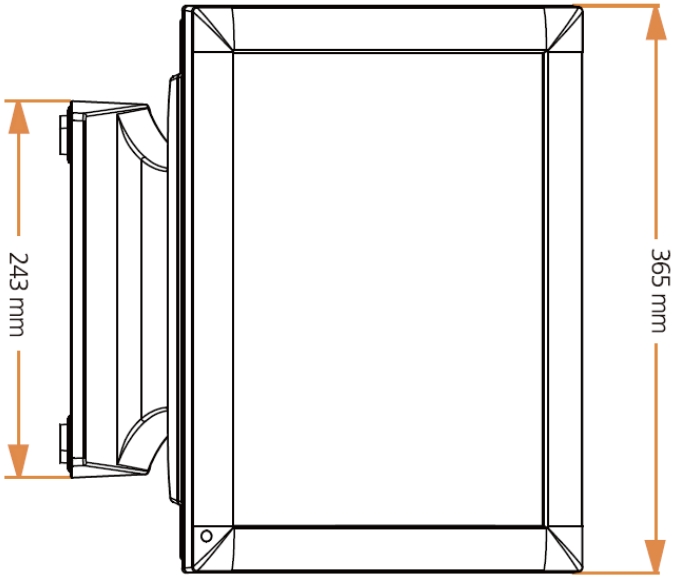

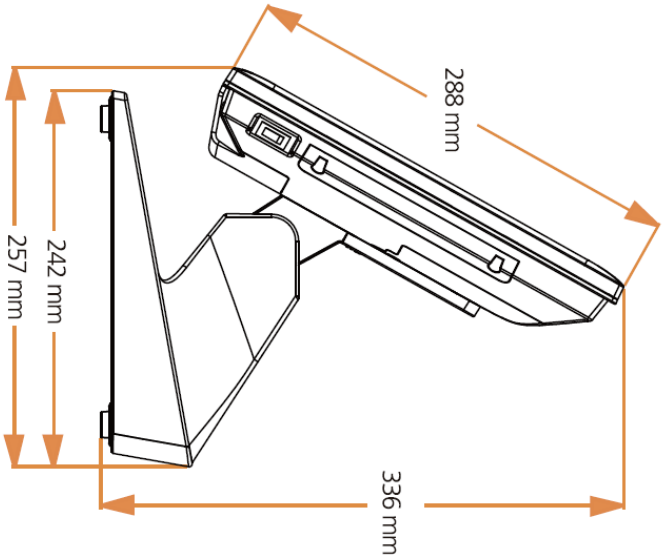

UNIT	mm
RANGE	TOLERANCES
0 – 10	± 0.10
10 – 50	± 0.15
50 – 100	± 0.20
100 –	± 0.25

Main Board	
CPU	Intel® Atom™ Processor D525
Chipset	Intel® ICH8-M
System Memory	1 x 204 Pin DDR3 SO-DIMM Socket, up to 4GB
Thermal Solution	Fan-less
OS	Windows® XP/ XPe/ WES, WEPOS, POSReady, WinCE*, Windows® 7 *, Linux*, DOS 6.22
Display	
TFT LCD Size	15”
Brightness	250 nits
Resolution	1024 x 768
Touch Screen	5-wire Resistive Type
Tilt Angle	0°~90°
Storage Device	
DOM	1 x IDE, 2 x SATA
HDD	1 x 2.5" SATA
Compact Flash	1 x slot compact flash type II
I/O Ports	
Serial	6 x RS-232 Pin9 ,w/ RI/5V/12V Selectable by BIOS COM 1 : RS-232/422/485, DB-9 COM 2 : RS232 , RJ45 10 pins COM 3 : RS232 , DB-9 COM 4 : RS232 , Internal pin header COM 5 : RS232 , Internal 15-Pin header with PS/2 COM 6 : RS232 , Internal pin header for Customer Display
Parallel	1 x DB25
USB	**4** x USB 2.0
LAN	2 x Gigabit Ethernet by RJ-45 , Support Wake on LAN
Cash Drawer	1 x RJ11 (24VDC)
Audio	2W Speaker x 2
Expansion	1 x Mini PCIe
Others	
Wall mount	Support VESA Mount
Power Input	External adapter, 90W, 19VDC input
Color	Black/Silver (Two Tone)
Material	Plastic / Aluminum
EMC& Safety Compliance	FCC / CE / WEEE / RoHS / CCC / CB
Weight	6.43 Kg (appox.)
Dimension	365W x 257D x 336H (mm)
Operation Temperature	0°C ~ 35°C
Storage Temperature	-20° ~ 60°C
Storage Humidity	20 – 85% RH, non-condensing

* Please contact supplier for detail infomation.